
Candyl Twist
Important Notices

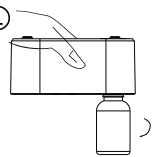


Do not remove this dropper insert from bottles

- Use upright, on a flat surface only. Do not shake.
- Power off between uses to avoid wasting oil.
- If the diffuser leaks oil, emits mist too slowly, or does not emit mist, use the cleaning instructions on the reverse side to flush excess oil from the tank.

Cleaning Instructions

① 

With the device off, turn it upside-down without removing the bottle. Wait at least a minute to allow oil to flow back into the bottle. Then, unscrew and remove the essential oil bottle. Use caution during this process to avoid spilling

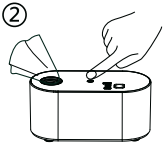② 

Stuff a tissue, cloth, sponge, or other absorbent material into the bottle acceptor opening. Place your finger over the mist outlet to cover it. Start the diffuser. Excess oil will spray into the tissue. Turn off the device before removing the tissue or your finger.