
Candyl Twist Pro

User Guide

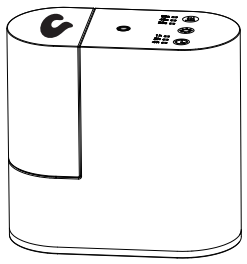


Waterless
Nebulizing Diffuser


Quick-Start Guide



Works with DIM18 (18mm) bottle threads, 5-30ml bottles.

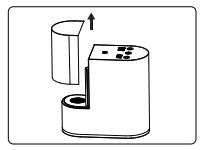


1. Remove the cover.
2. Turn the diffuser upside-down. Keeping bottle upright, install by twisting clockwise into acceptor.

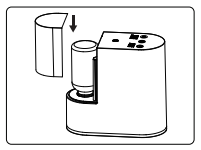

3. Replace the cover and place upright on a flat surface.
4. Press and hold the mist button for 3 seconds to turn on.

Operating Instructions

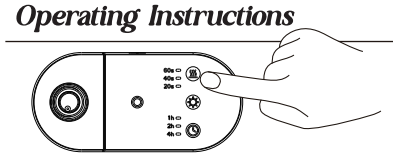

Button Control

Mist / Power Button

Hold for 3 seconds to power ON or OFF

While on, press to cycle through intensity modes, as follows:

Intensity Modes

Mode	Spray Duration	Frequency Intervals
High	60 sec	1 min
Medium	40 sec	3 min
Low	20 sec	5 min

Lighting Modes

While on, press the light button to cycle through fixed colors, a color-changing gradient, or no light.

Timers


Press the timer button to cycle through automatic shutoff timers of 1H / 2H / 4H or no timer.

Indicator lights next to the buttons will display the current intensity mode or shutoff timer. The battery indicator light is located above the charging port.

Flashing red = depleted. Solid red = charging.
Solid green = fully charged.

Changing Bottles

With the device off, remove the cover without removing the bottle. Turn the device upside-down. It is recommended to deplete each bottle completely before changing to avoid spilling. If changing an unempty bottle, hold upside down at least a minute before unscrewing to allow oil to flow back into the bottle.

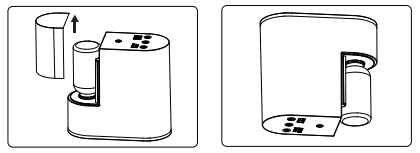


Unscrew counterclockwise to remove, screw clockwise to install. Screw in new bottles snugly.

Return upright and replace the cover before powering on.

Specifications

1. Dimensions: 119x56x114mm/4.69x2.20x4.49in
2. Main Material: PP
3. Product Weight: Approx. 305g / 11 oz
4. Power Source: DC 5V 2A
5. Battery Capacity: 2500mAh
6. Bottle Size: 18 mm diameter screws
7. Made in China


Product Diagram

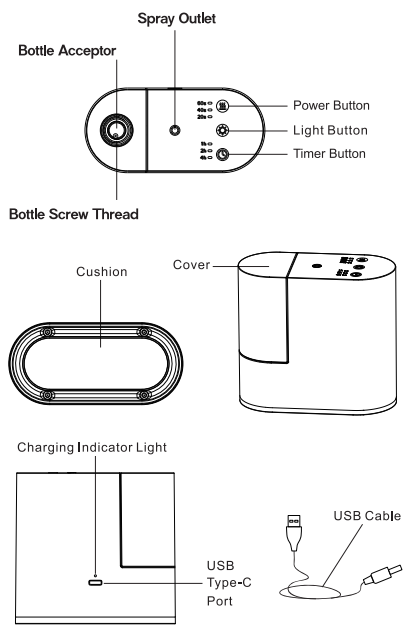

Troubleshooting

Symptom	Cause(s)	Solution(s)
Startup failure/early shutdown	● Improper power source, loose cable, or dead battery.	● Unplug and replace the USB cable. Try a different USB power source.
Oil leakage	● Essential oil bottle not tightened securely. ● Essential oil is left inside the oil tank and diffuser stored at angle.	● Secure the essential oil bottle tightly. ● Follow the steps in the cleaning instructions to clean the essential oil in the oil tank.
No mist	● Too much essential oil in the oil tank.	● Follow the steps in the cleaning instructions to clean the essential oil in the oil tank.

Cleaning Instructions

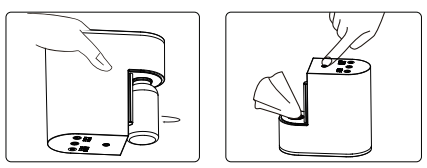

1. Turn OFF the device and then invert the machine with the essential oil bottle so that the oil inside the machine flows back into the essential oil bottle. Then, rotate and remove the essential oil bottle, and turn the device upright.

2. Take a tissue, cloth, or any absorbent material and stuff it into the oil tank opening. Then, start the machine and place your finger over the mist outlet. Excess oil will be sprayed out from the left side of the oil tank.

Safety Precautions

Use the diffuser only for its intended purposes. Improper use could damage the device and void its warranty.

Do not use with alcohol-based fragrances, or oils with sediments or other impurities.

Avoid moving while in use. Instead, power off then move.

Do not expose to water or high temperatures.

If any smoke or burning smell occurs, unplug immediately and discontinue use of the device entirely

Direct inhalation is not recommended and should be avoided due to the high concentration. Avoid spraying into eyes.

This is not a medical device. Supervise use by children.

Additional Information

The cover is not leak-proof and may leak if not kept upright.

It is normal for spray output volume to vary with different types of essential oil. If the spray volume is too low, clean the diffuser of excess oil and/or dilute the oil into a carrier oil to lower its viscosity.

It is recommended to use each bottle completely before changing, as some spilling is likely to occur while changing bottles that are not empty.

Clean essential oils that may incidentally come into contact with the exterior of the device, as they may cause discoloration if left unaddressed.

As with all lithium-ion batteries, useful life may degrade over time.

Help & Support

Visit candyl.co/help

Call us at: 310-866-3807
Email: contact@candyl.co

Warranty

1-year limited warranty.
Do not return to store.
File claim at candyl.co/warranty for free replacement.

Candyl USA Trade-Mark

DESIGNER HOME AROMA PRODUCTS

The Candle, Reinvented Denver, CO

英文版说明书三折四页（风琴折）
3mm出血位

成品尺寸：60X95mm
展开尺寸：240X95mm