
Candyl Twist

User Guide

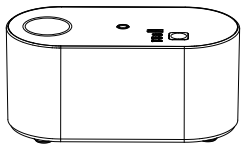

Waterless Nebulizing Diffuser

USB Model


Quick-Start Guide

Use flat surface only.
Keep upright when in use.
Do not shake.


Dropper insert
Do not remove from bottle.




Works with DIN18 (18mm) bottle threads, 5-50ml bottles.

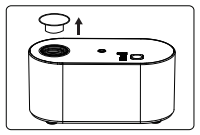


1. Remove the rubber dust cover from the bottle acceptor.

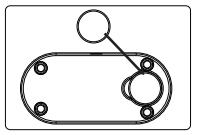

2. Place the dust cover in the space on the under side for convenient storage.

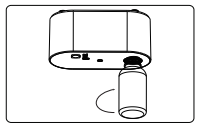


3. Turn the diffuser upside-down. With the bottle remaining upright, install it into the acceptor by inserting and twisting clockwise.

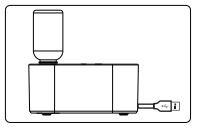

4. Turn the diffuser back upright. Plug the USB-C cable into a standard USB power source. (5V 1A)

Operating Instructions



Button Control

Long press for 3 seconds to power on or power off.
After powering on, short press to control the intensity mode:

Intensity Modes

Mode	Spray Duration	Frequency Intervals
High	60 sec	1 min
Medium	40 sec	3 min
Low	20 sec	5 min

Working Cycles

Mode	Indicator Light	Working Time	Standby Time
High	1 min	2 hour	22 hour
Medium	3 min	8 hour	16 hour
Low	5 min	8 hour	16 hour

These cycles repeat every 24 hours while on. Hold in the button for 3 seconds to turn off.

After the indicator light goes off, press the button once to show the current mode.

Press the button again to change intensity modes. Changing modes resets the cycle timers.


Turn off or unplug the diffuser between uses to preserve oil when not in use.


The 24 hour diffusion and standby cycles will repeat while the device remains on.

Changing Bottles

With the device off, turn it upside-down without removing the bottle. It is recommended to deplete each bottle completely before changing to avoid spilling. If changing an unempty bottle, hold upside down at least a minute before unscrewing to allow oil to flow back in. Screw in new bottles snugly.

Unscrew counterclockwise to remove, screw clockwise to install.

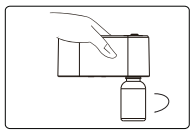


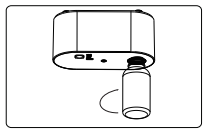

Specifications

1. Dimensions: 119x56x55mm/4.69x2.20x2.17in
2. Main Material: PP
3. Product Weight: Approx. 194g / 7oz
4. Suggested Room Size: 15 sq.m/161 sq.ft
5. Power Source: DC 5V 1A
6. Bottle Size: 18 mm diameter screws
7. Made in China


Product Diagram

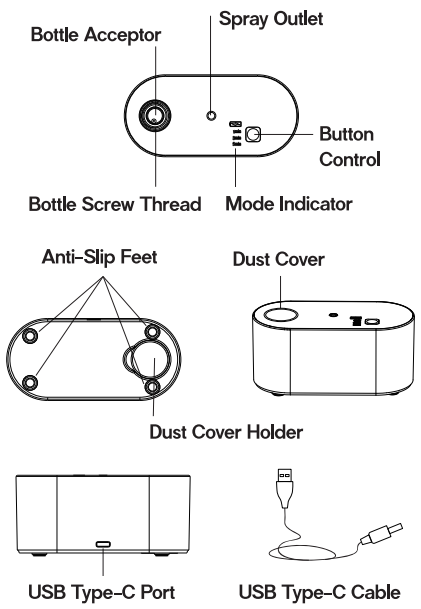


Troubleshooting

Symptom	Cause(s)	Solution(s)
Startup failure/early shutdown	● Improper power source or loose cable.	● Unplug and replace the USB cable. Try a different USB power source.
Oil leakage	● Essential oil bottle not tightened securely. ● Essential oil is left inside the oil tank and diffuser stored at angle.	● Secure the essential oil bottle tightly. ● Follow the steps in the cleaning instructions to clean the essential oil in the oil tank.
No mist	● Too much essential oil in the oil tank.	● Follow the steps in the cleaning instructions to clean the essential oil in the oil tank.

Cleaning Instructions

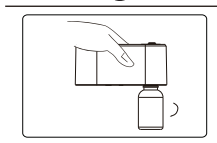

1. Turn OFF the device and then invert the machine with the essential oil bottle so that the oil inside the machine flows back into the essential oil bottle. Then, rotate and remove the essential oil bottle, and turn the device upright.

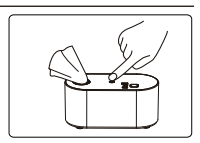

2. Take a tissue, cloth, or any absorbent material and stuff it into the oil tank opening. Then, start the machine and place your finger over the mist outlet. Excess oil will be sprayed out from the left side oil tank.

Safety Precautions

Use the diffuser only for its intended purposes. Improper use could damage the device and void its warranty.

Do not use with alcohol-based fragrances, or oils with sediments or other impurities.

Avoid moving while in use. Instead, power off then move.

Do not expose to water or high temperatures.

If any smoke or burning smell occurs, unplug immediately and discontinue use of the device entirely

Direct inhalation is not recommended and should be avoided due to the high concentration. Avoid spraying into eyes.

This is not a medical device. Supervise use by children.

Additional Information

It is recommended to use each bottle completely before changing, as some spilling is likely to occur while changing bottles that are not empty.

It is normal for spray output volume to vary with different types of essential oil. If the spray volume is too low, clean the diffuser of excess oil and/or dilute the oil into a carrier oil to lower its viscosity.

Clean essential oils that may incidentally come into contact with the exterior of the device, as they may cause discoloration if unaddressed.

Help & Support

Visit candyl.co/help

Call us at: 310-866-3807
Email: contact@candyl.co

Warranty

1-year limited warranty.
Do not return to store.
File claim at candyl.co/warranty for free replacement.

Candyl USA Trade-Mark
DESIGNER HOME AROMA PRODUCTS
The Candle, Reinvented Denver, CO

英文版说明书三折四页（风琴折）
3mm出血位

成品尺寸：60X95mm
展开尺寸：240X95mm