
CANDYL DELTA

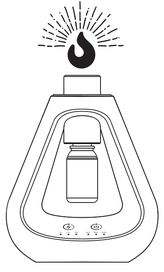

Waterless

ESSENTIAL OIL DIFFUSER

1.Overview

Enjoy your favorite essential oils or home fragrances without the need to dilute them in water or carrier oils. Candyl Delta will atomize the oils as small as 1-3 microns for highly effective diffusion while preserving the oils' molecular structure, maintaining all therapeutic benefits with absolute purity.



Technical Specifications:


Candyl Delta Waterless Diffuser

Battery Capacity : 1200mAh 3.7V(4.44Wh)
Materials : Metal + Polypropylene
Recommended Coverage : ≈ 50m²

USB-C Input : 5V⎓1A
Weight : 10oz (292g)
Oil Capacity : ≈ 10mL
Size :65.6 x126 x155.5mm



Use upright only. Do not tip or invert. Improper use could damage the diffuser.

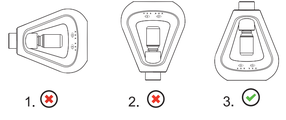

Installation of Bottles


Only install 5ml or 10ml bottles. Larger bottles will not fit. To use oils from larger bottles, first carefully transfer them into the included empty bottle.

① Turn the gold metal nozzle counterclockwise slightly to the unlocked position.


② Pull the nozzle upward to remove the nozzle and oil bottle from the device.



③ Unscrew existing bottle from nozzle. If applicable, remove dropper insert from new bottle before proceeding. Insert the straw into the new or refilled bottle and screw into the nozzle apparatus.

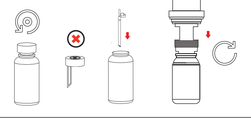

④ Reinsert the nozzle apparatus into the diffuser by pushing down snugly. You must align the lock keys first, then turn clockwise slightly to lock.

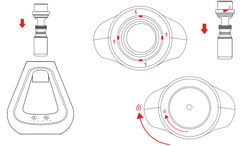

Designed to work with 100% pure essential oils, blended oils, aroma oils and fragrance oils. Avoid oils with sediments or impurities and avoid non-aroma-therapy oils (e.g. massage oils).

The following essential oils, in their 100% pure form, are considered high-viscosity (thickness) and should be avoided in their pure form. It is safe to use them in blends with lower viscosity oils.

- Amyris
- Blue Cypress
- Buddha Wood
- Chamomile (German)
- Coffee
- Myrrh
- Patchouli
- Rose Absolute
- Rose Otto
- Sandalwood (all varieties)
- Vetiver

You may experience poor performance while using these oils, and the device may require maintenance and cleaning after each attempted use. See maintenance and cleaning instructions later in this manual if no spray is coming out when it should be..


⑤ Press the touch-sensitive On/Off Button to start diffusing. The indicator light underneath each button will inform which timers are active. One frequency timer and one duration timer are always active. Use these buttons and timers to set you preferred diffusion cycles.

The frequency (right side) is how long the intervals between diffusion cycles are (1min, 2min, 3min). The duration (left side) is how long each diffusion cycle lasts. (5s, 15s, 30s).



⑥ Hold in the On/Off Button for 2-3 seconds to turn off the device.

If you forget to turn off the device, the oils may fully deplete by diffusion. The device will turn off on its own only when the battery is low.



Connect to USB-C 5v-1A power supply. A red light above the charging port indicates the device is charging. This light will turn green when fully charged.

Cleaning & Maintenance

It's best to clean the straw when changing oils, and at regular intervals for best results. If the spray seems lessened, clean the straw to eliminate congestion of oils. To remove and clean the straw:



Remove the nozzle apparatus as shown in the "Installation of Bottles" section of this manual.



Remove the straw by pulling up.
Do not lose the O-ring and replace if it comes out.



Clean the straw by running it under flowing water from the sink, in a bowl of warm soapy water, or with rubbing alcohol.

Be sure to fully dry the straw before using. When dry, reinstall the straw.



Support & Warranty

If you are experiencing issues with your diffuser, please visit candyl.co/help for additional information or to get product support. To get in touch, use the "contact us" button on the website, call 310-866-3807, or email contact@candyl.co.

Your diffuser is covered by a 1-year limited warranty. If we are unable to resolve your issue through product support, you will be sent a replacement at no cost. Rather than returning the product to the store where you purchased it, visit candyl.co/warranty and fill out the online form to receive your free replacement. **Improper use may void the warranty. Do not use tilted or inverted.**

